



4 Wide Bows

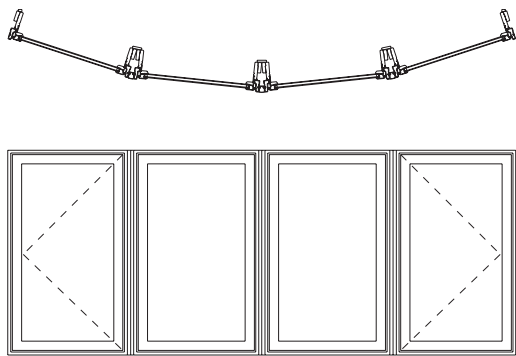

CN Width	RO Width		Projection	
	Inches	(mm)	Inches	(mm)
17 – 4W	66 17/64	(1683)	6 7/8	(175)
21 – 4W	81 53/64	(2078)	8 17/32	(217)
25 – 4W	97 25/64	(2474)	10 3/16	(259)
29 – 4W	112 61/64	(2869)	11 27/32	(301)


5 Wide Bows

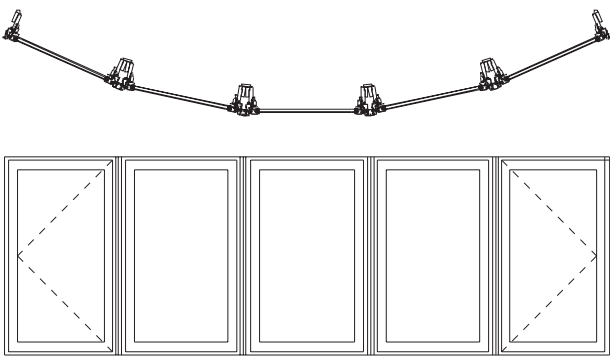


CN Width	RO Width		Projection	
	Inches	(mm)	Inches	(mm)
17 – 5W	81 31/64	(2070)	10 1/4	(260)
21 – 5W	100 5/8	(2556)	12 23/32	(323)
25 – 5W	119 3/4	(3042)	15 11/64	(385)

CN Height	RO Height	
	Inches	(mm)
31	31 13/16	(808)
35	35 13/16	(910)
39	39 13/16	(1011)
43	43 13/16	(1113)
47	47 13/16	(1214)
55	55 13/16	(1418)
59	59 13/16	(1519)
63	63 13/16	(1621)
71	71 13/16	(1824)

Construction Details

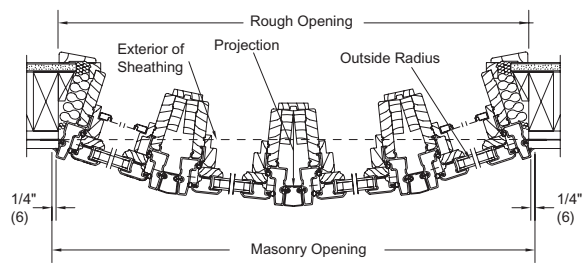

4-Wide Casement Bow Unit

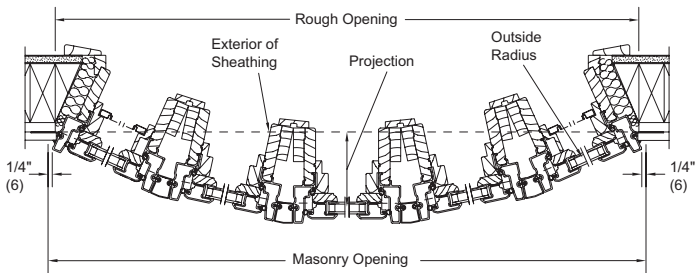

5-Wide Casement Bow Unit

Details and Elevations not to scale.
For rough opening height of a Bay or Bow, add 3/16" to Casement rough opening height.
* When using Marvin Bays and Bows to replace products within existing openings, you will want to contact your local Marvin dealer for assistance and field verification of dimensions.
For further details and drawings visit the 'Technical Specifications' section at Marvin.com.